
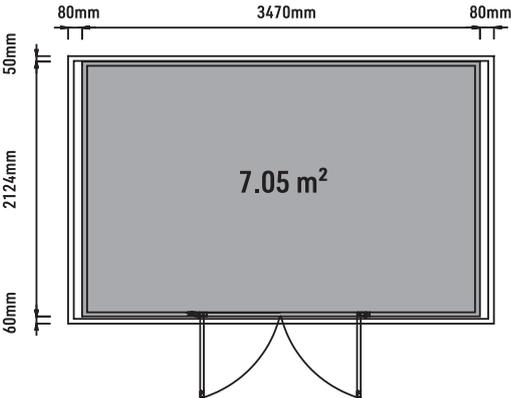


11x7 Installation Guide

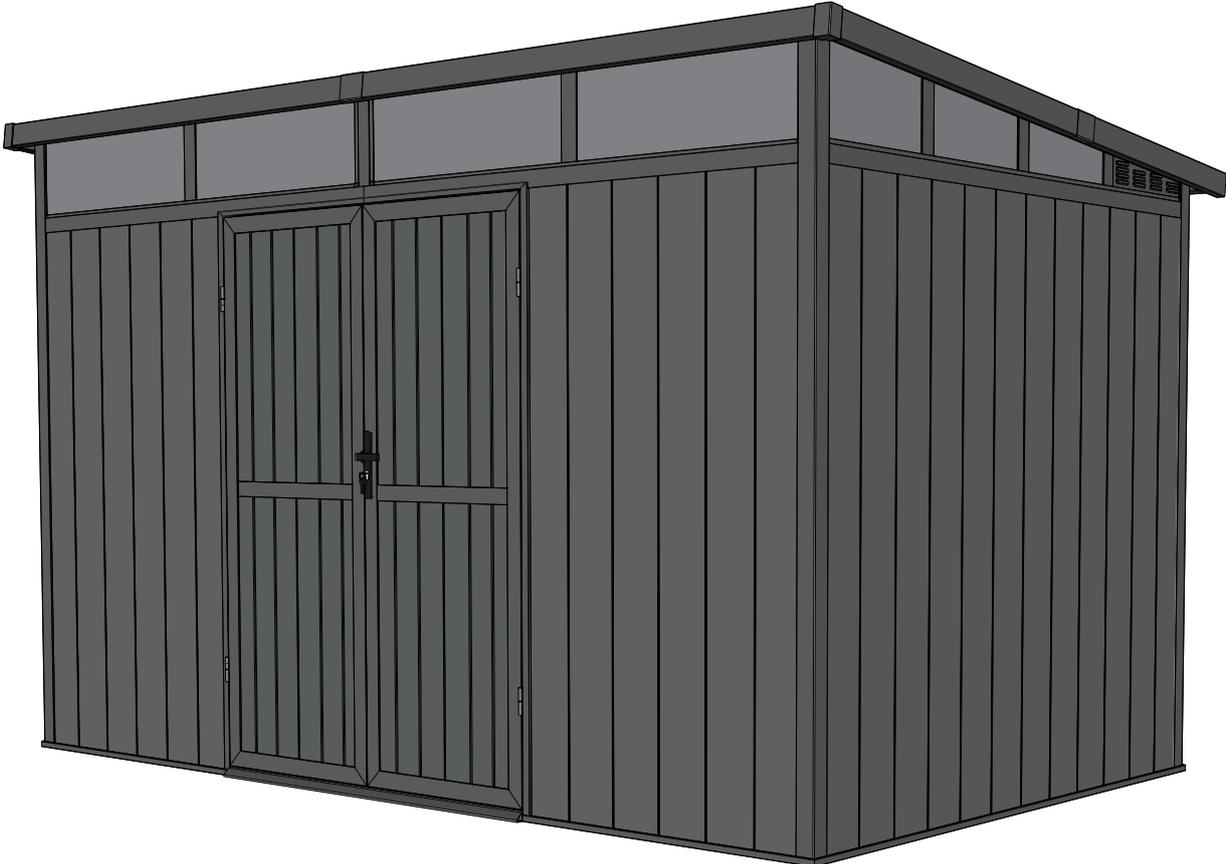

Westwood 

RECOMMENDATIONS

Please read the components list BEFORE assembly, make sure that no parts are damaged or missing. Read through the complete assembly instructions again.

Assemble all parts according to the instructions in this manual and do not skip any step.

Treat the wall panels with extreme care before and during assembly. Carefully place them on the ground. Avoid stepping on or placing any objects on it.

At least two people are required to assemble the garden sheds.

RECOMMENDATION: Build a base of wood/composite or concrete as a foundation.



Leave enough space at the installation site outside of the WPC shed so that you can access the WPC Garden sheds from the outside during assembly.

Remove all parts from the packaging and spread them out on a clean work surface by Area I/II and III.

Due to the high proportion of wood, the surface may have different shades and change color over time. This does not require special treatment, nor does it affect the life of the WPC Garden sheds.

If you want to paint the WPC shed, please ask a professional painter for advice on choosing the right colors for the wood-plastic composite material.

Do not use aggressive cleaning agents as they can stain or damage the WPC shed.



CARE AND SAFETY INSTRUCTIONS

- ☑ The garden shed is generally used for storing objects. The WPC shed is not especially designed for residential purposes.
- ☑ It is recommended to anchor the WPC shed on an immovable object or foundation (it will serve as storm protection).
- ☑ Do not set up on a windy or cold day.
- ☑ Check the WPC shed regularly for stability and make sure that the location is level.
- ☑ Be careful when handling parts with steel edges.
- ☑ For the construction and handling of the WPC shed, please only use tools that are listed in the assembly instructions.
- ☑ Always wear work gloves, safety glasses and any other kind of clothing with long sleeves when assembling the garden shed or performing any kind of maintenance work.
- ☑ Avoid using lawnmowers and mechanical scythe in the immediate vicinity of the WPC shed.
- ☑ Always wear safety goggles and always follow the manufacturer's instructions when using power tools. Clean the WPC shed with a garden hose and a mild detergent. You can use a hard brush but do not use any abrasive or degreasing agents, as well as cleaning agents containing oil or acetone, as these can stain or damage the product.
- ☑ Do not store any hot objects in the WPC shed, such as recently used grills or blowtorches, or any volatile chemicals.
- ☑ Do not lean heavy objects against the walls of the WPC shed, as this could distort the entire WPC shed. Keep the roof free of snow and accumulated foliage. Large amounts of snow can damage the WPC shed and make it dangerous for entering.
- ☑ Make sure there is sufficient ventilation at the WPC shed. This way you avoid moisture.
- ☑ Cover the roof of the WPC shed with a tight roof covering. Pay attention to the roof slope. A self-adhesive sealing membrane is best suited.
- ☑ The wind direction is an important factor that must be taken into account when setting up the WPC shed. Try to avoid placing it anywhere where there could be excessive wind loads, especially high wind pressure on the doors. Always keep the doors closed and locked when the WPC shed is not in use to avoid any kind of wind damage.
- ☑ Please contact your local authorities to inquire if a permit is required to build the WPC shed.


NOTE: To make the installation more flexible, the installation personnels need to predrill holes by themselves to fix screw.











Garden Shed Three-view Drawing

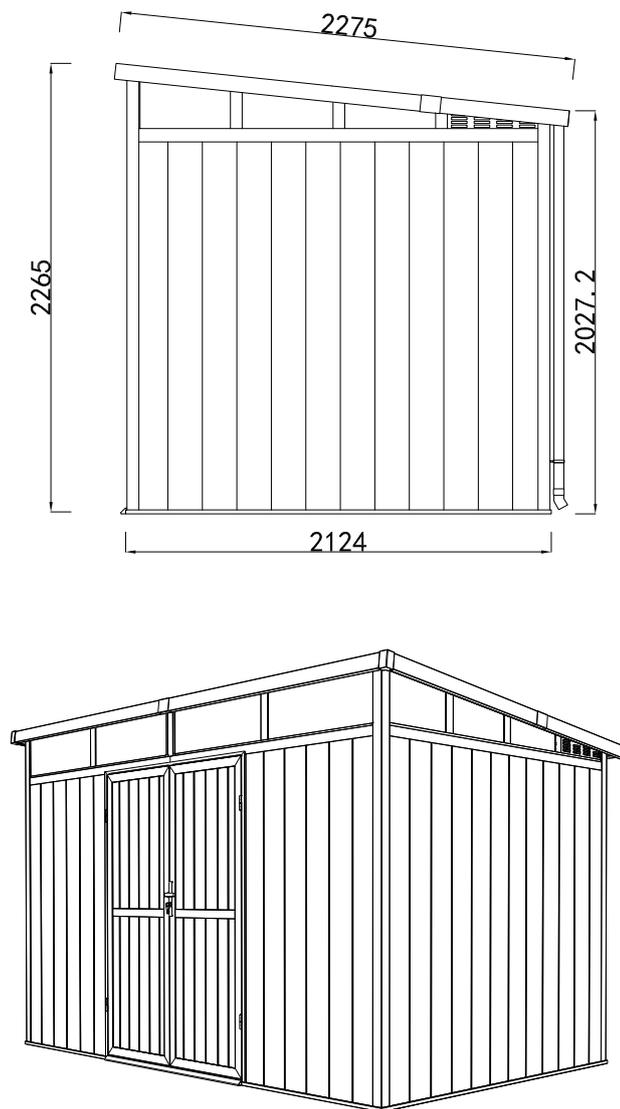
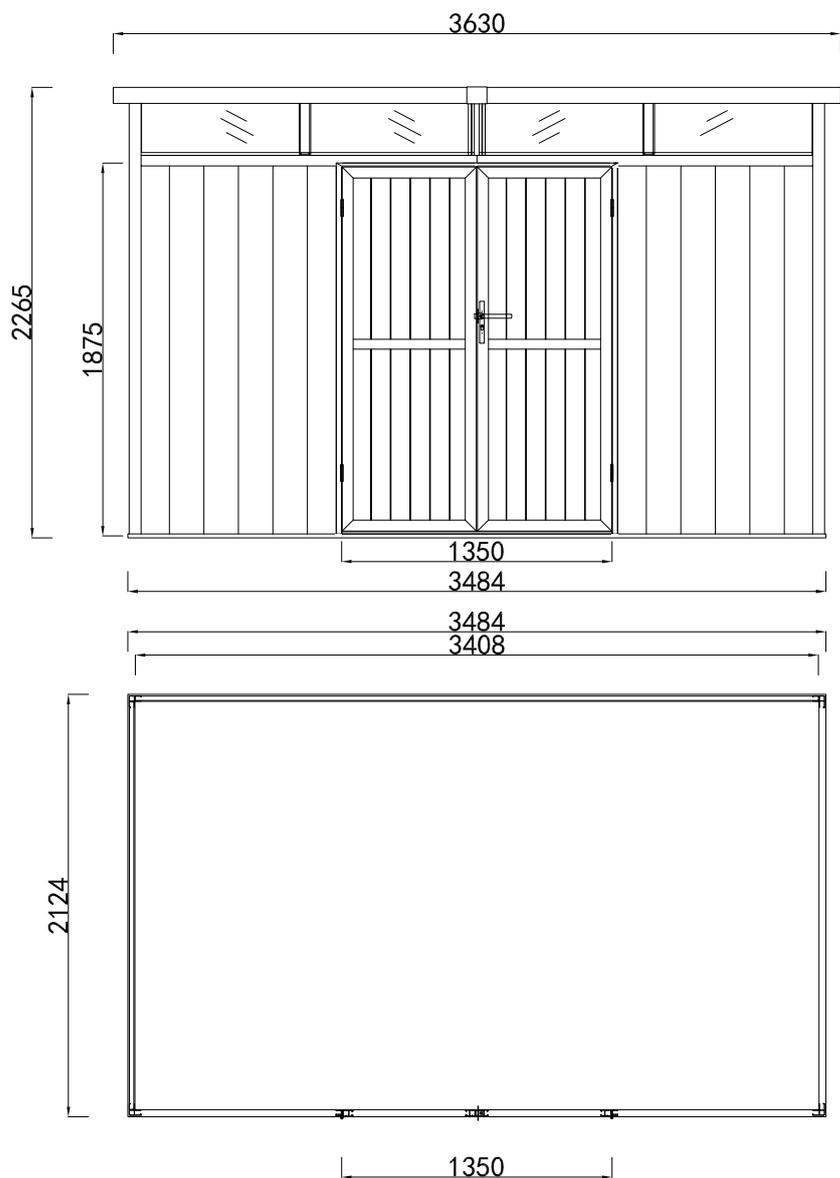


Tools Required for Installation

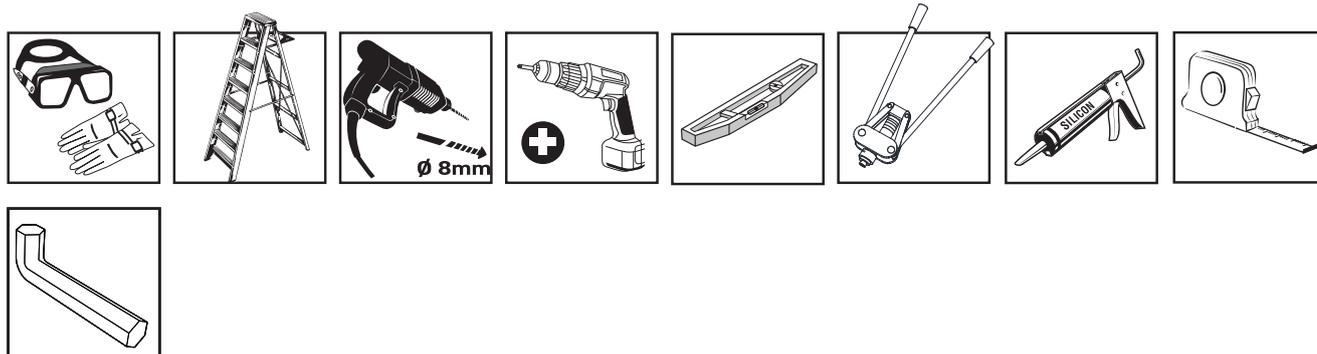


No	Structure	Description	QTY	Code
1-1		Aluminum Bottom Frame (Front & Rear) 35x30 L=1742mm	2	M1107 35.2-30-1742-1
1-2		Aluminum Bottom Frame (Front & Rear) 35x30 L=1742mm	2	M1107 35.2-30-1742-2
2		Aluminum Bottom Frame (Left & Right) 35x30 L=2124mm	2	M1107 35.2-30-2124
3		Aluminum Column (Left Front) 59x59 L=2222mm	1	Left front column M1107 59-59-2222
4		Aluminum Column (Right Front) 59x59 L=2222mm	1	Right front column M1107 59-59-2222
5		Aluminum Column (Left Rear) 59x59 L=2008mm	1	Left rear column M1107 59-59-2008
6		Aluminum Column (Right Rear) 59x59 L=2008mm	1	Right rear column M1107 59-59-2008
7		Aluminum Threshold 59x30 L=1350mm	1	M1107 59.3-30-1350
8		Aluminum Door Frame (Left & Right) 50x32 L=1875	2	M-50-32-1875
9		Aluminum Door Frame(Upper) 50x32 L=1398	1	M-50-32-1398
10		Aluminum H-shaped Beam (Front & Rear) 53x24 L=1704mm	4	M1107 53-23.9-1704
11		Aluminum H-shaped Beam (Left & Right) 53x24 L=2048mm	2	M1107 53-23.9-2048
12		Aluminum Verge Board 80x45 L=1815mm	2	M1107 80-45-1815-A
13		Aluminum Verge Board 80x45 L=1815mm	2	M1107 80-45-1815-B
14		Aluminum Verge Board 80x45 L=460mm	2	M1107 80-45-460
15		Aluminum H-shaped Column 50x19.6 L=322mm	2	M1107 80-19.6-322
16		Aluminum Beam 72x50 L=1713mm	6	M1107 72-50-1713
17		Window (Front) 1691x322	2	M1107 1691-322
18		Window (Left Side) 2045x322x107	1	M1107 2045-322


No	Structure	Description	QTY	Code
19		Window (Right Side) 2045x322x107	1	M1107 2045-322
20		Color Steel Tile 900x2200	5	
21		Double Door 1318x1805	1	
22	 	WPC Plank Wall 176x20L=1875	36	
23	 	WPC Plank Wall 176x20L=1964	20	
24	 	Aluminum Beam 69x47 L=600mm	3	M01107 69-47-600
25	 	Aluminum Beam 19.8x19.8 L=600mm	2	M1107 19.8-19.8-600
26	 	Gutter for roof 90x45 L = 1810mm	1	M-1107 90-45-1810
27	 	Gutter for roof 90x45 L = 1810mm	1	M-1107 90-45-1810

A		Screws 8x80	20	
B		Screws 4x16	300	
C		Rivet 4x10	120	
D		Connector 50x50	6	
E		Screws 5x20	12	
F		Screws 5x45	66	
G		Screws 5x60	18	
H		Latch	2	
I		Hinge	4	
J		Plastic Cap for Aluminum Verge Board	2	
K		Door Lock Kit	1	
L		Gutter cover	2	
M		Riveting Gun	1	
N		Rivet 5x13	18	
O		connection clamp	1	
P		Gutter Outlet	1	
Q		Downpipes for gutters Length = 1900 mm	1	M-φ50-1900
T		Elbow	1	
R		Aluminium U profie 93*48L=100	1	M-93-48-100
Z		Aluminium Edge Band 83*46.5 L=100	3	M-83-46.5-100
S		Door connector	2	
U		Door frame mounting	4	

Westwood 

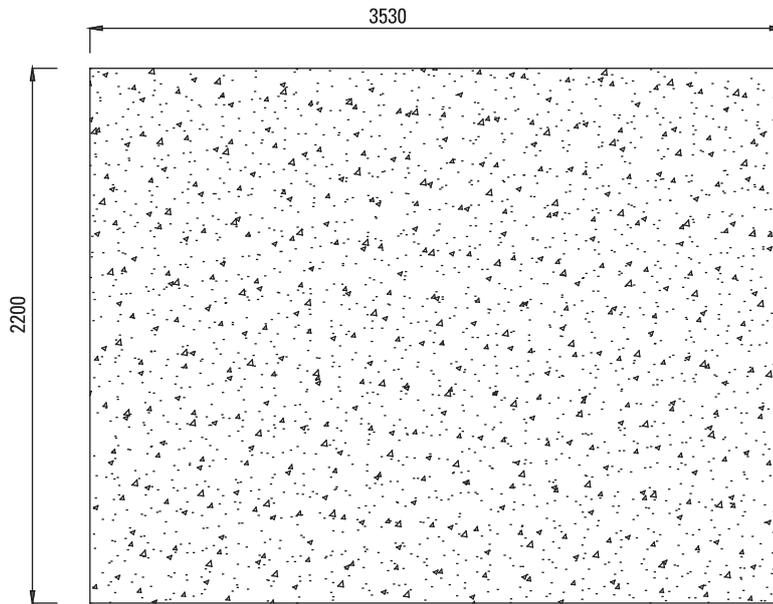


Garden shed should be installed on the hard ground like concrete foundation, the surface of ground should be flat and the size should follow the dimension of drawing.

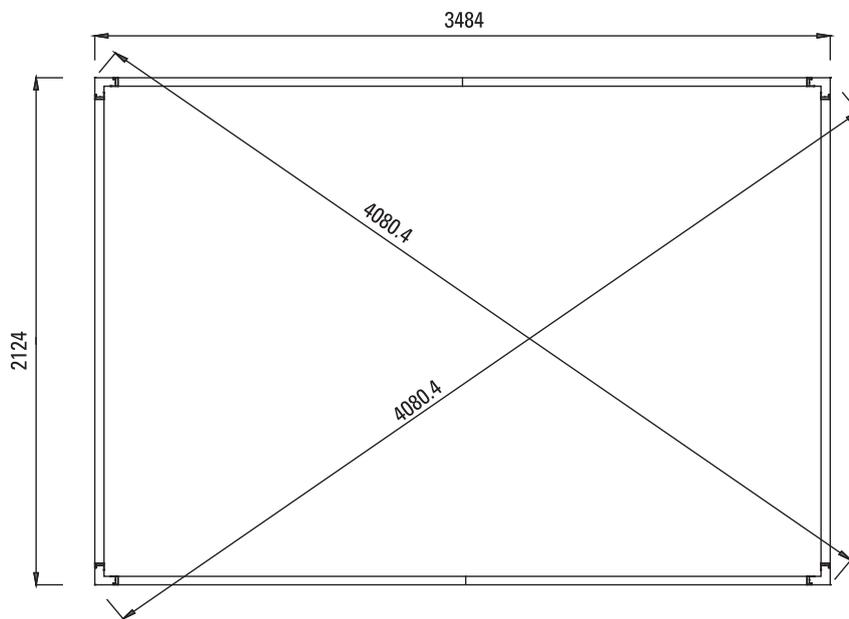


Bottom Beam Dimension Drawing.




After prepare the installation area for your garden shed, please check parts according to the part list firstly, then place those parts on site, and assemble the following parts in advance.

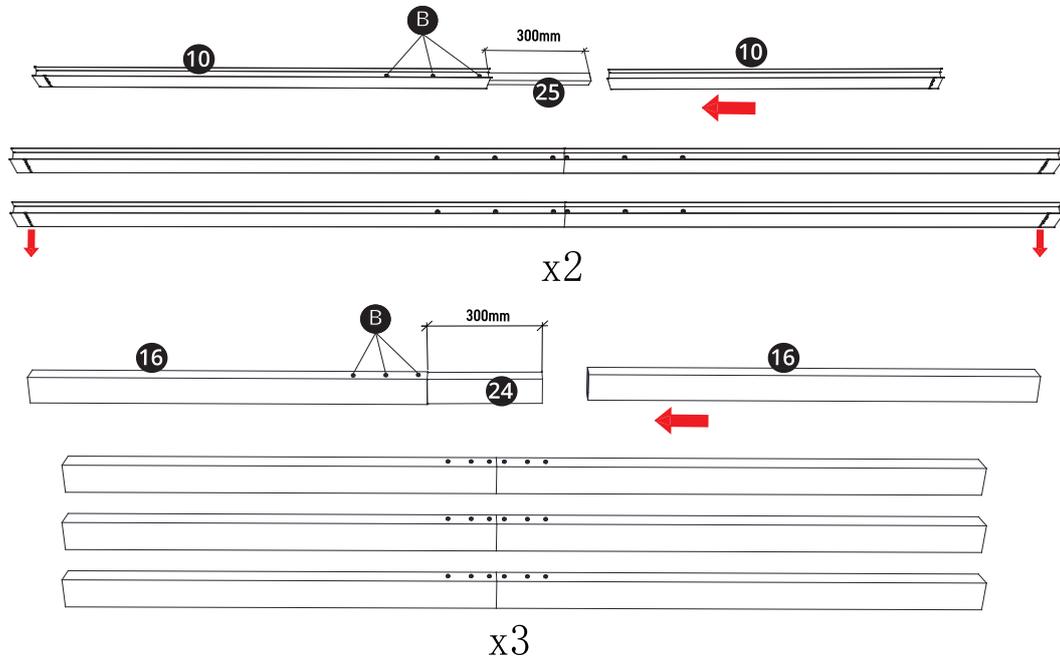


Please note that the notching is in the same direction.

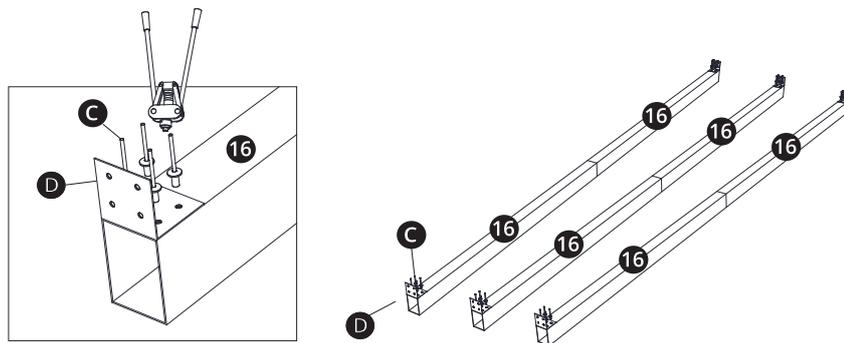


Connect the aluminum beams with L brackets by applying rivets in advance.

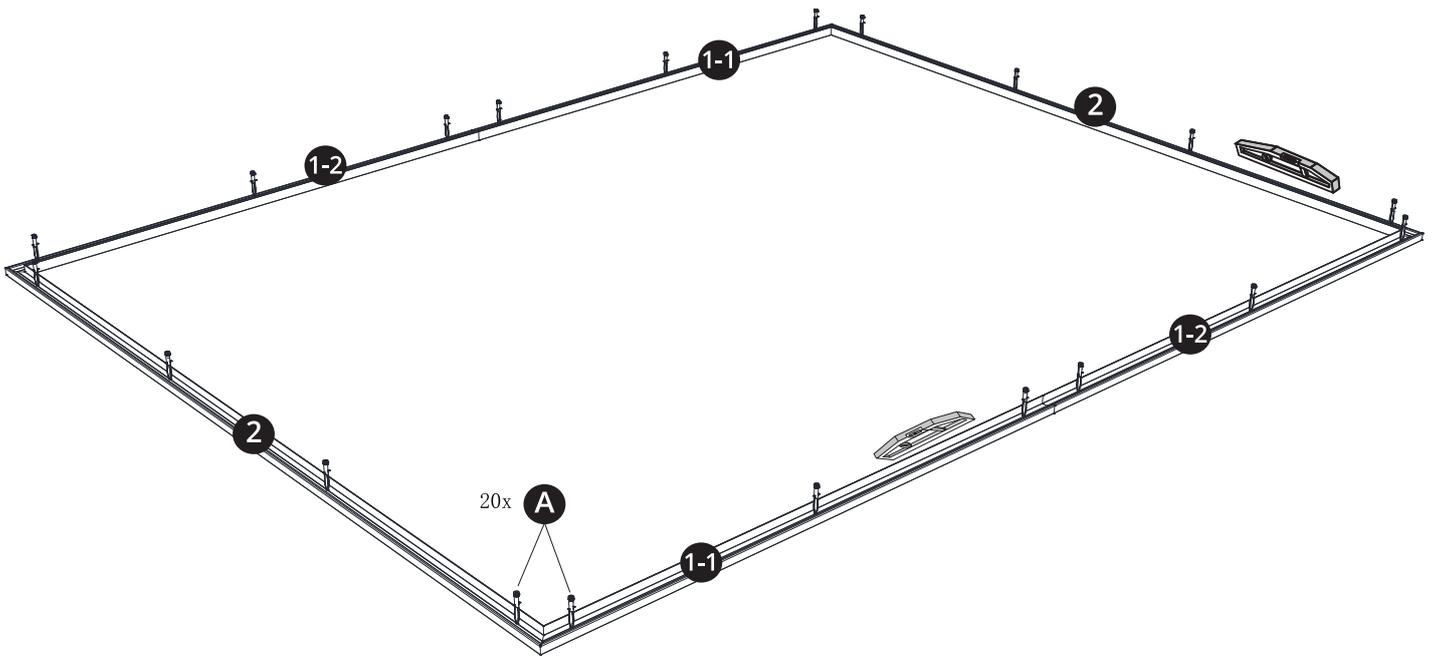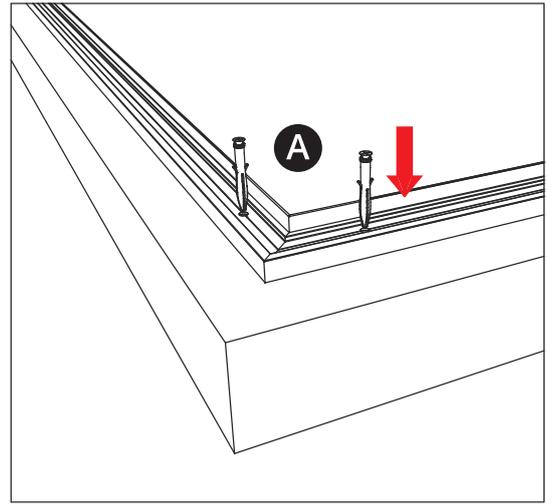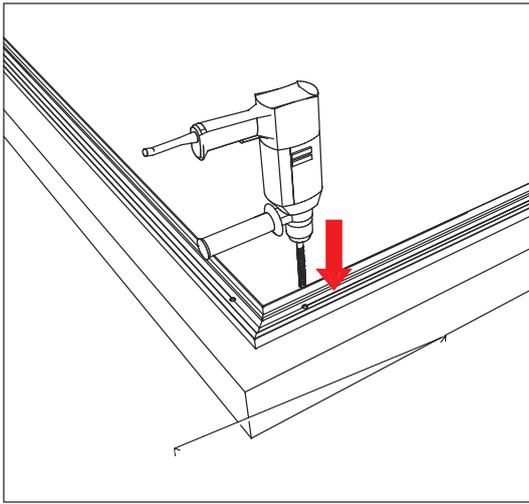


Install aluminum bottom frames according to dimensions and positions as the sketch map shown bellow, then fix them with plastic expansion bolts. Please make sure the leveling of the bottom frames.

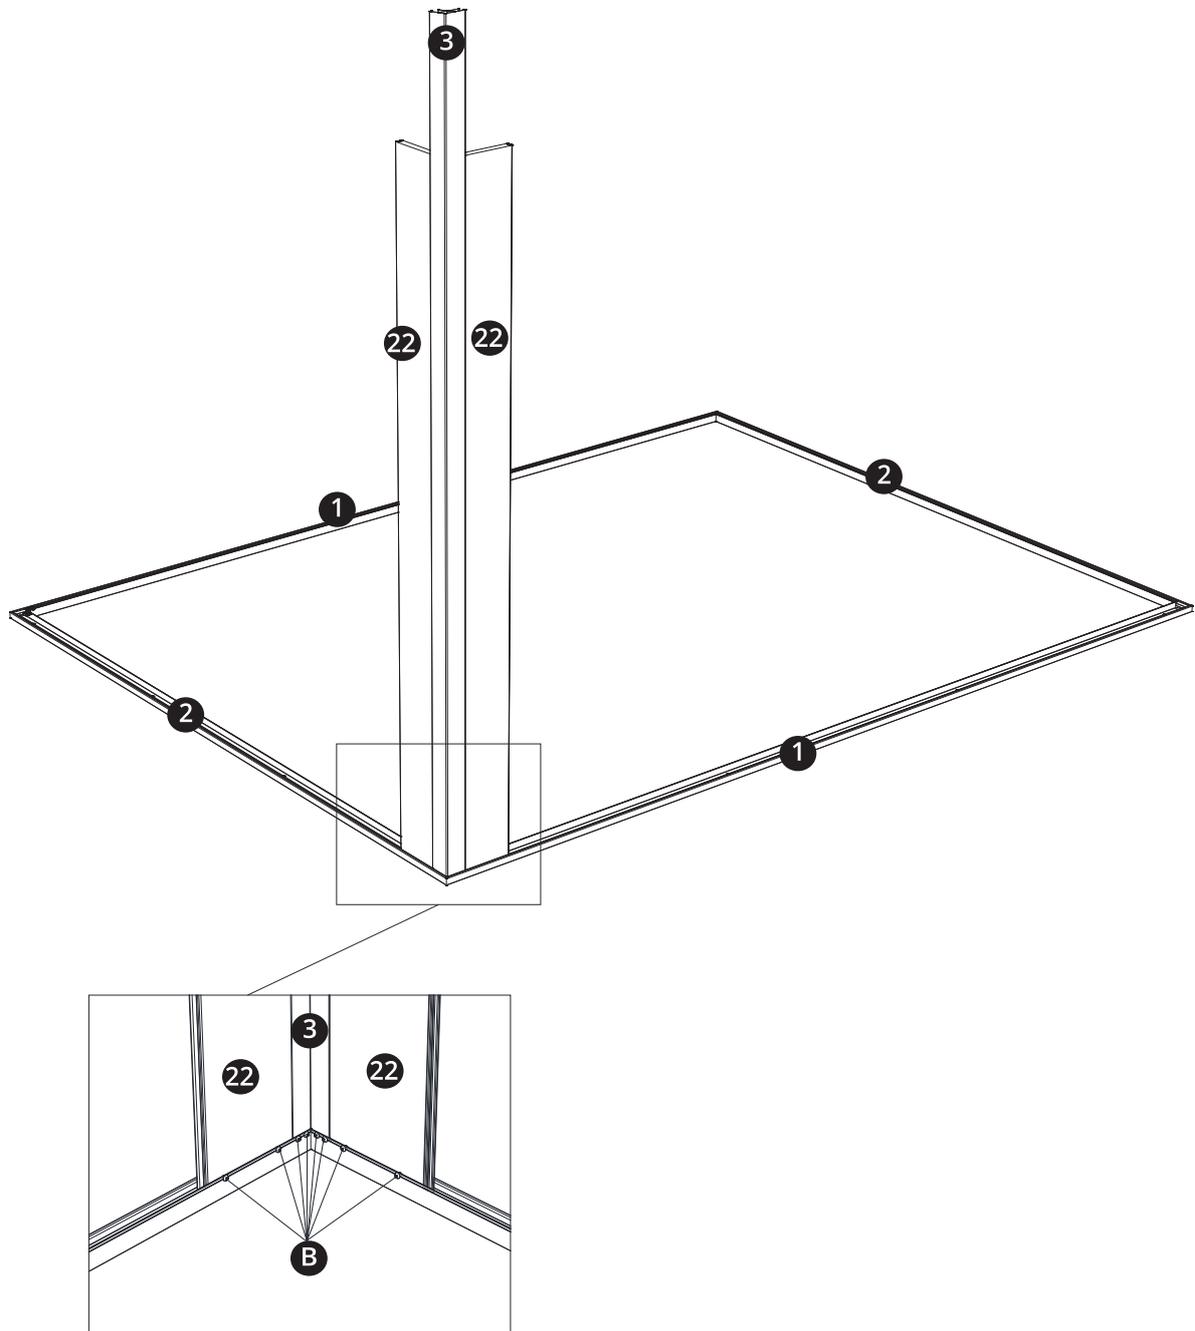


Install the shed from the front side, please insert column(left & front) and WPC plank wall into the groove of aluminum bottom frames, then fasten column and planks with screws. Two operators are required for this step, one needs to hold the column so as to avoid any broken caused by tilt. (We suggest to install garden shed under the calm weather, and more operators are needed if install under windy weather.)

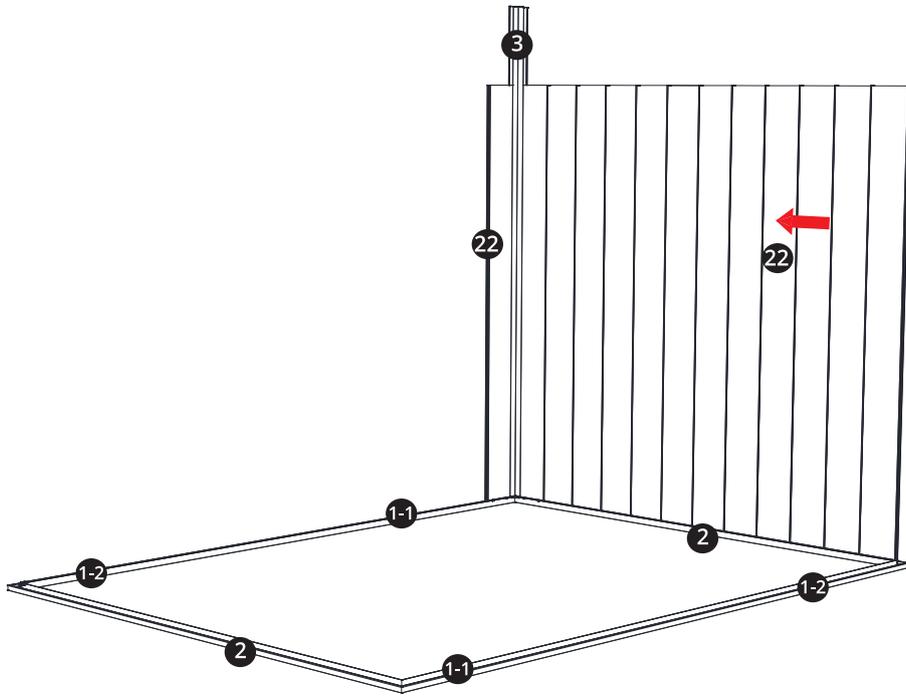


Install the WPC plank wall one by one.

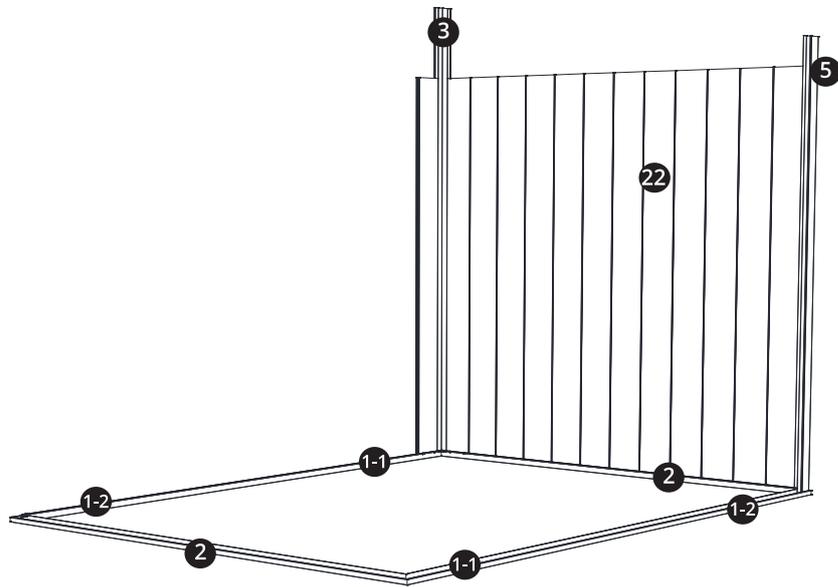





Install the column(left & rear) into place.

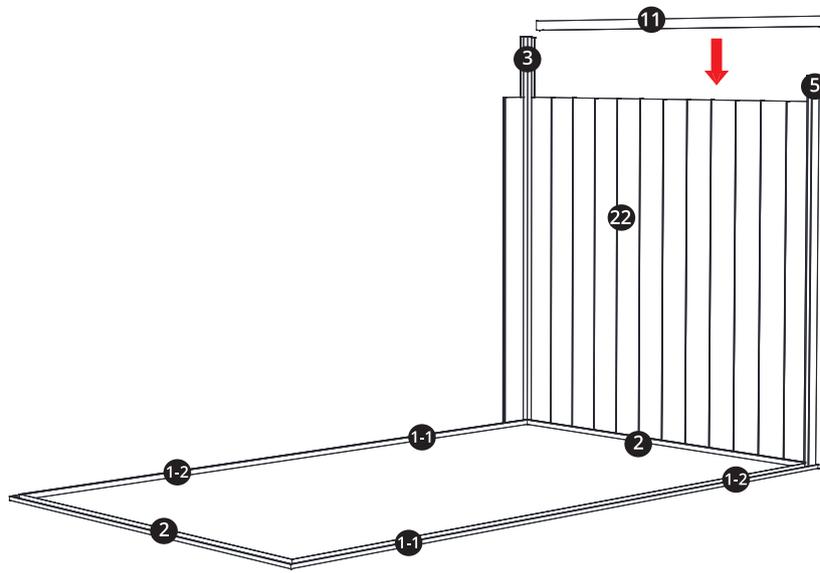


Install the WPC plank wall one by one.

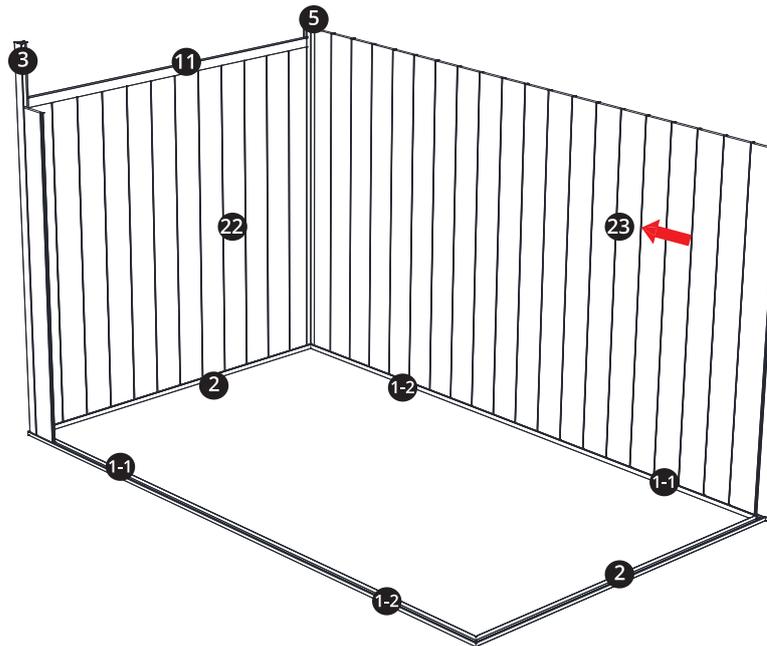


Insert the aluminum H-shaped beam (left/right) into the column, then install WPC plank wall into the place one by one.

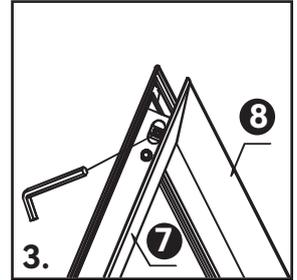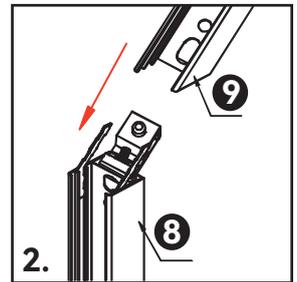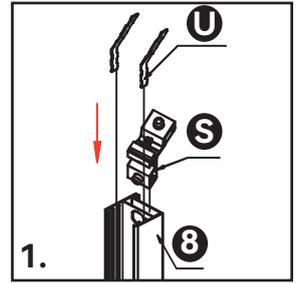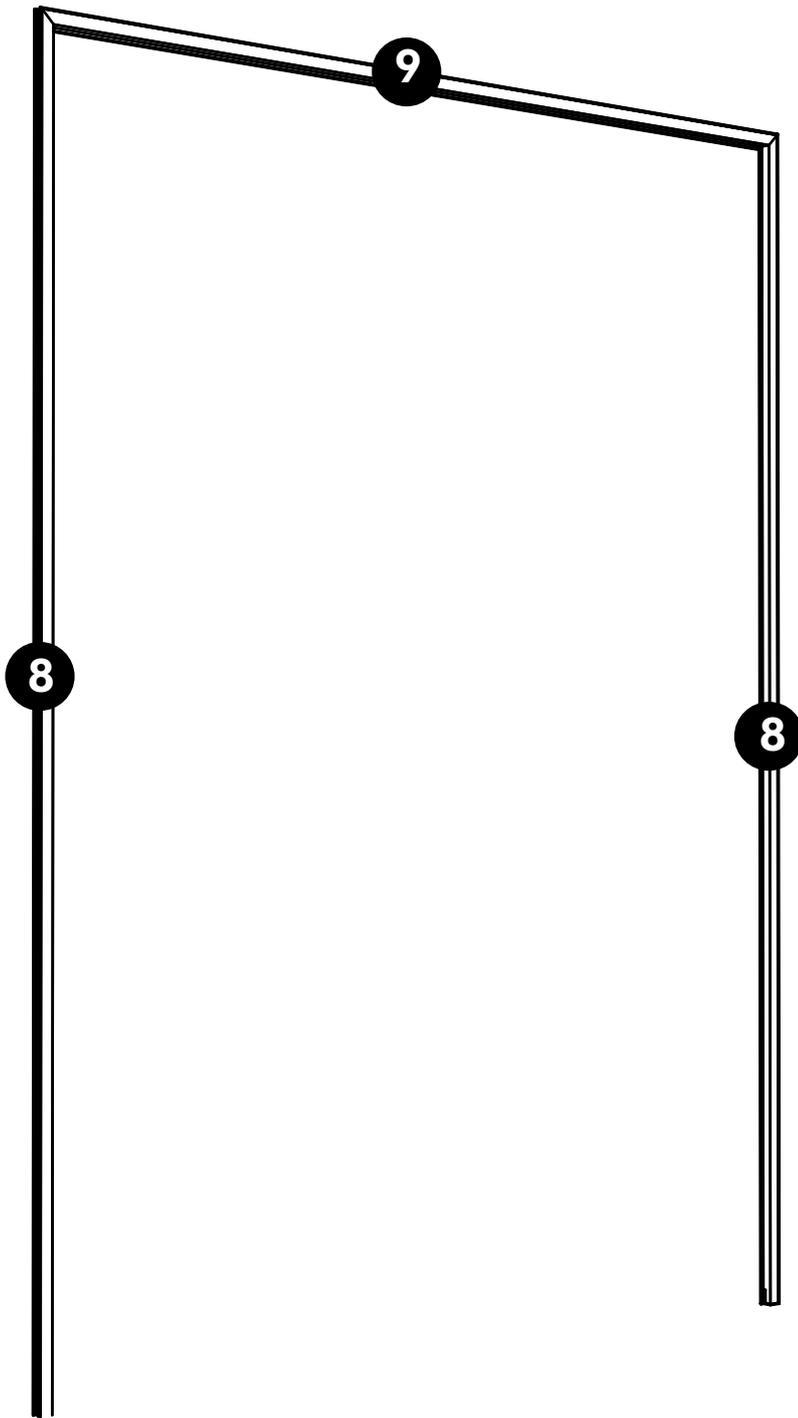


Fix the door frame as the diagram shown above.

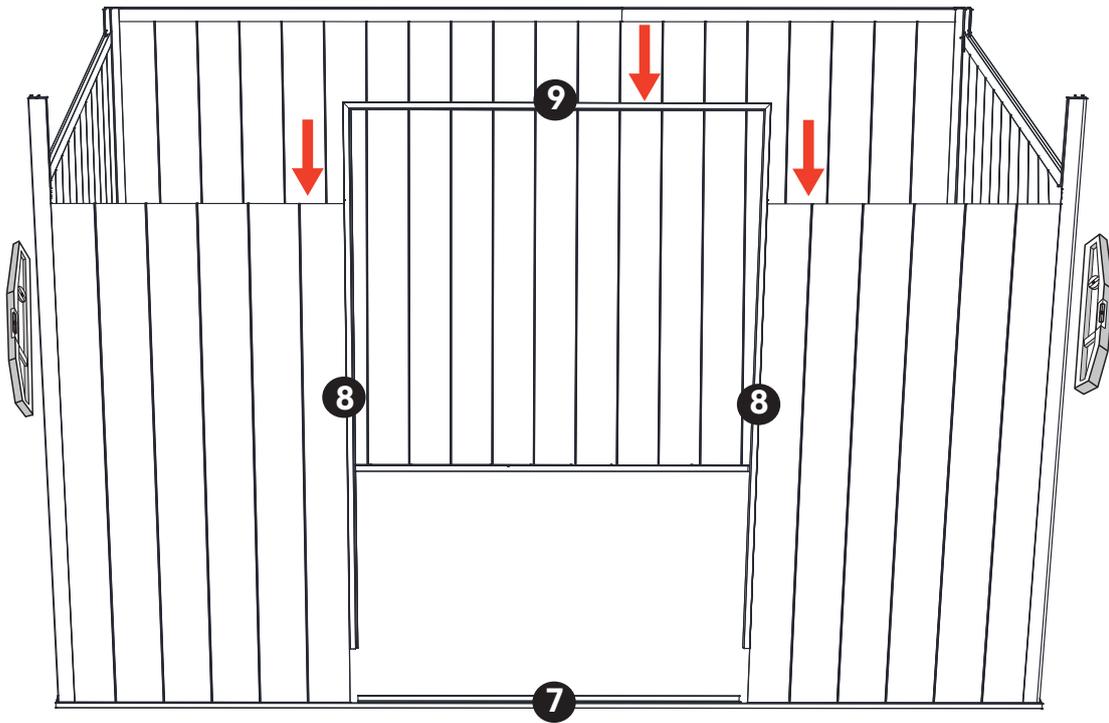


Insert the door frame into the boards as the diagram shown as above.

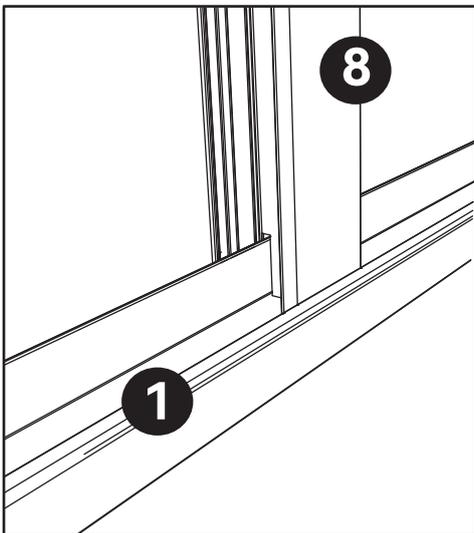



⚠ Please note the notch on the end of the door frame should be fit with the part No.1

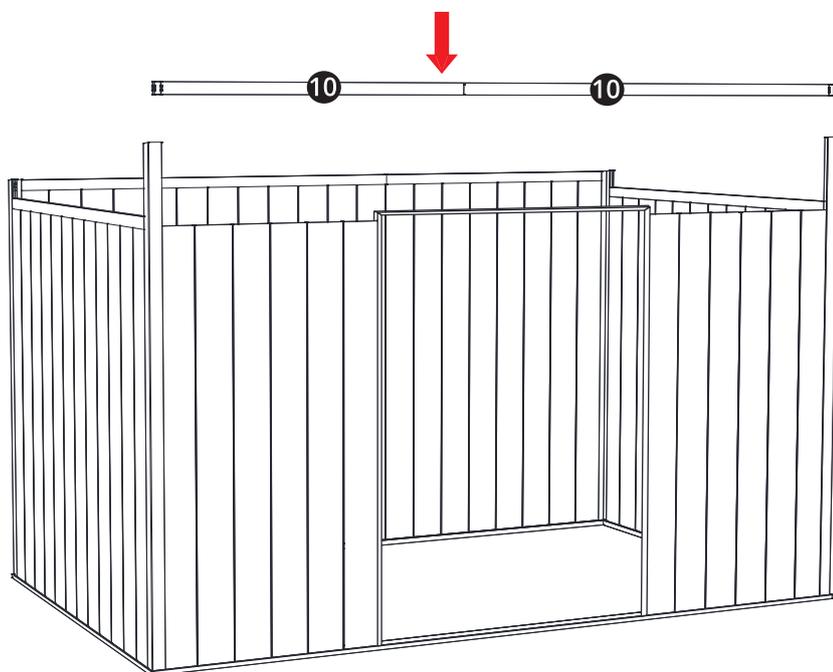


Install the Aluminum H Shape Beam as the diagram shows above

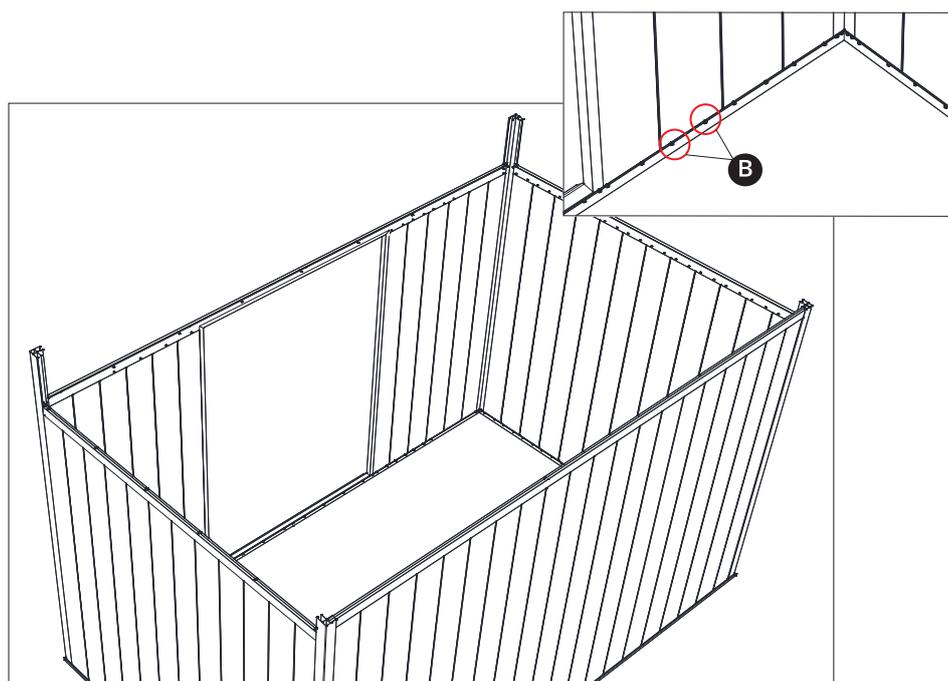


After adjustment, please fix WPC plank wall, aluminum bottom frame and aluminum H-shaped beam with screws, two screws are required in the connection of every WPC plank wall and beams.

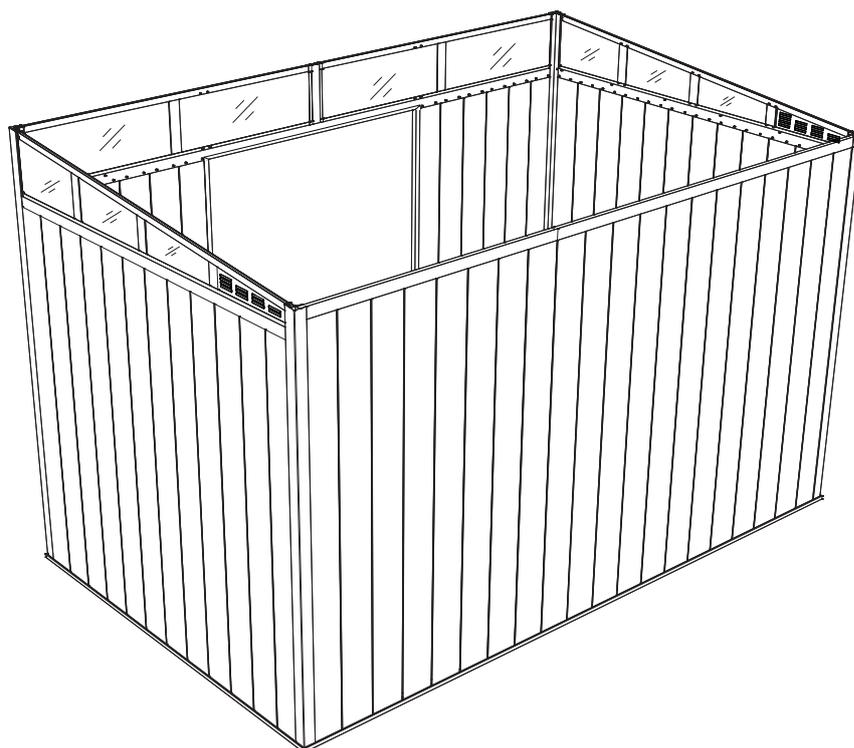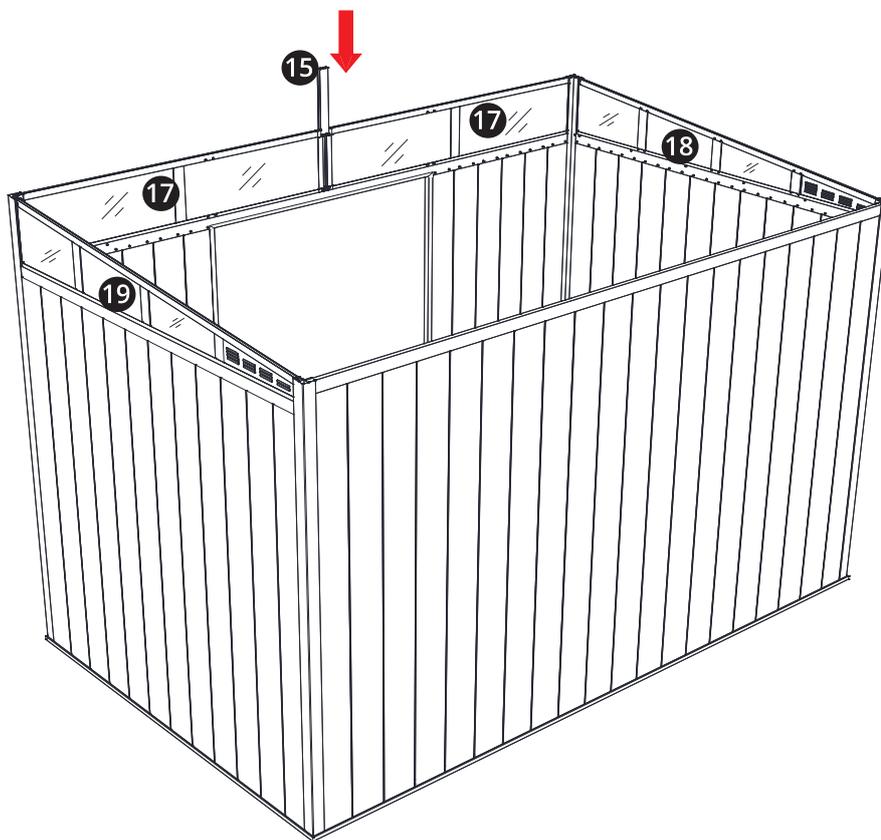


Install window into the place. (Please note different sides of window, the side with rivets should be toward the inside).

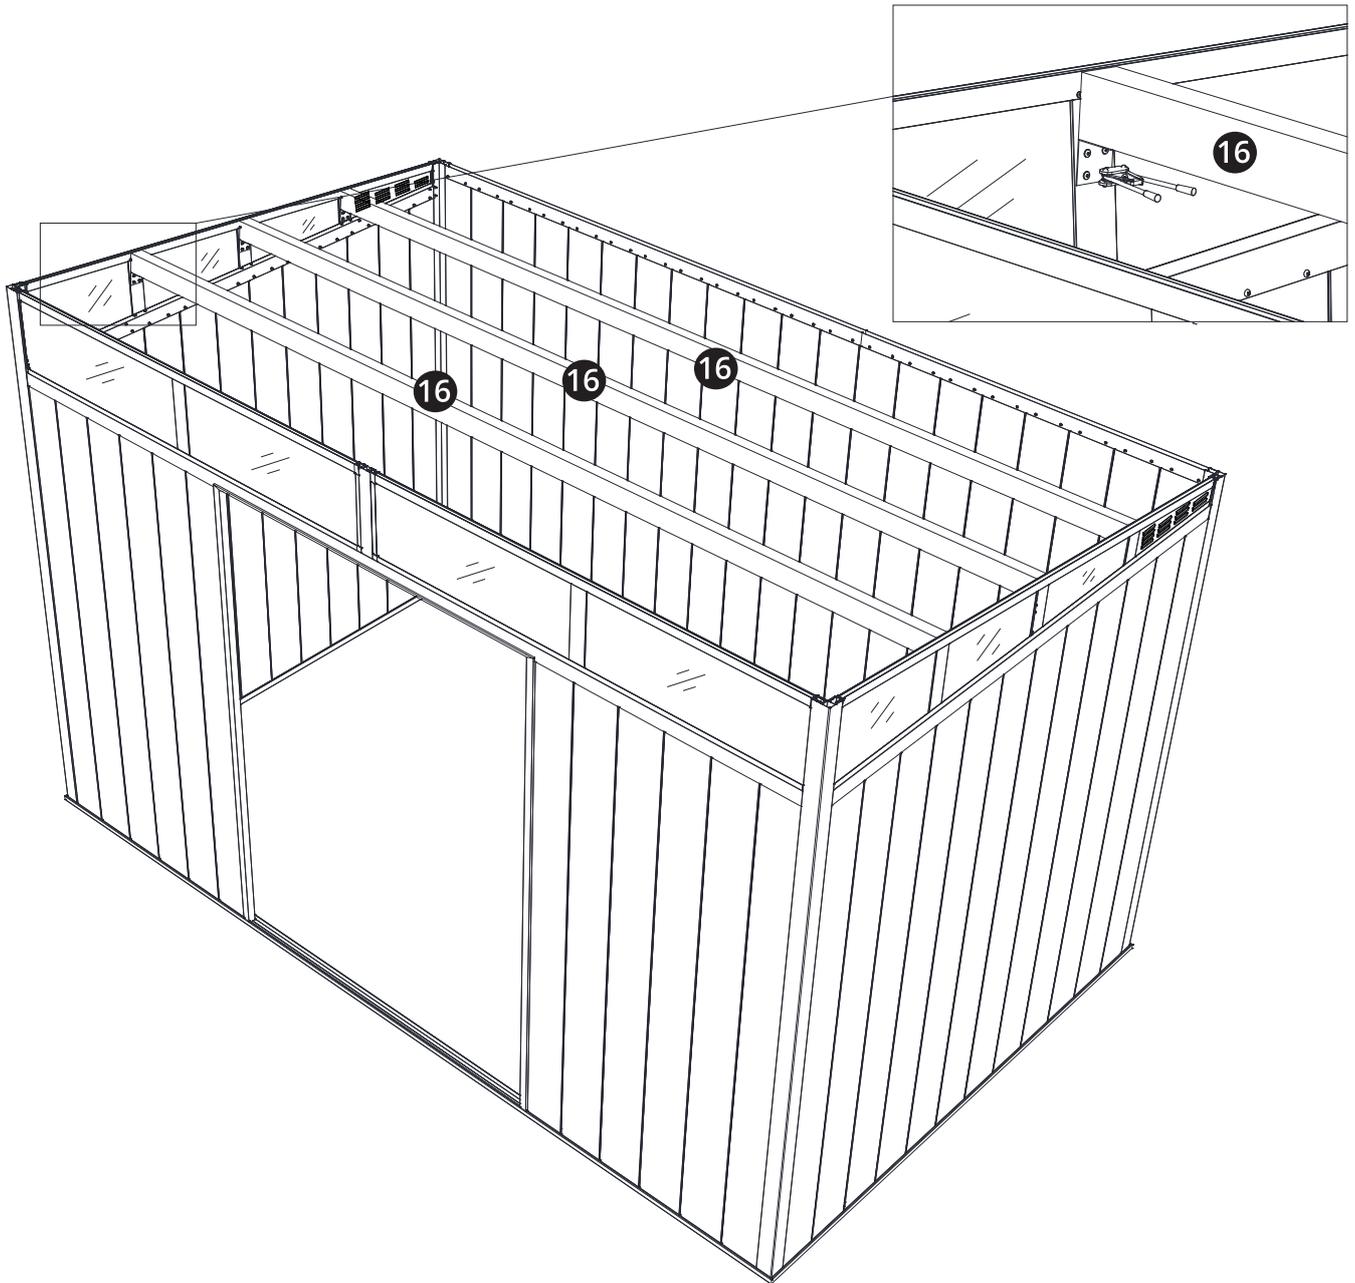



Connect the aluminum beams with window (left & right side) by using rivets. Fasten the window with columns and H-shaped beams by using screws.

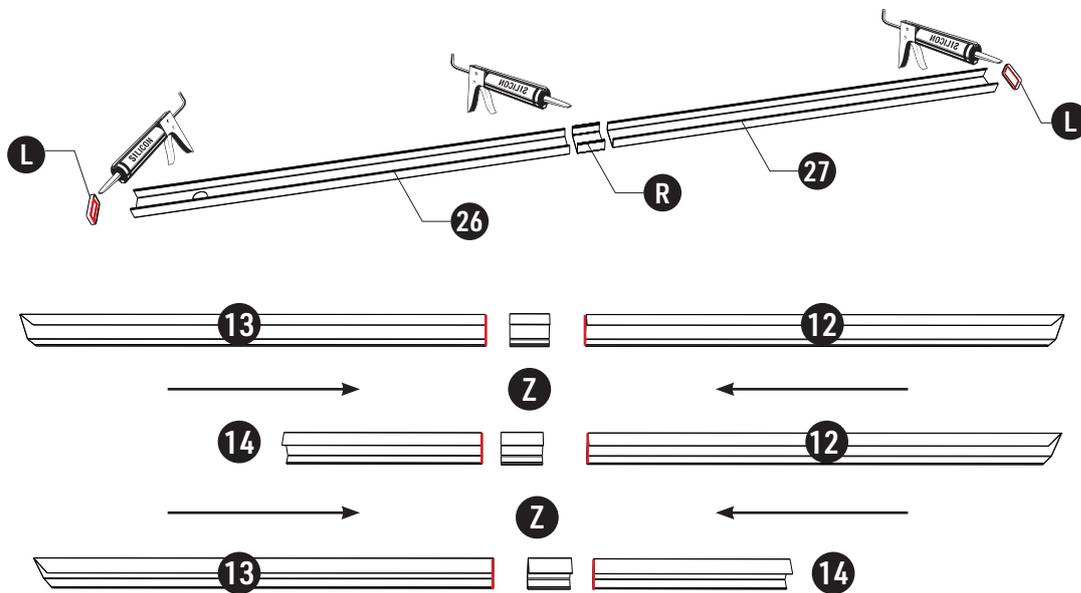






Glue the gutter caps, and connect the short U profile by using the sealant.

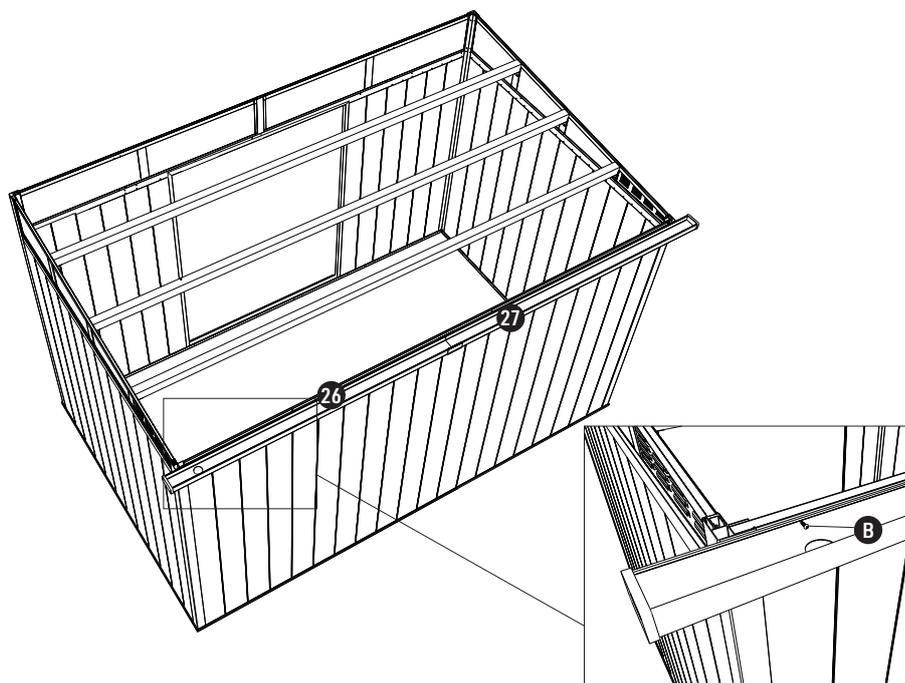


Place the aluminum gutter in the center position, so that make the overhang of the two ends are the same. Fix the gutter by using 5 or 6 screws

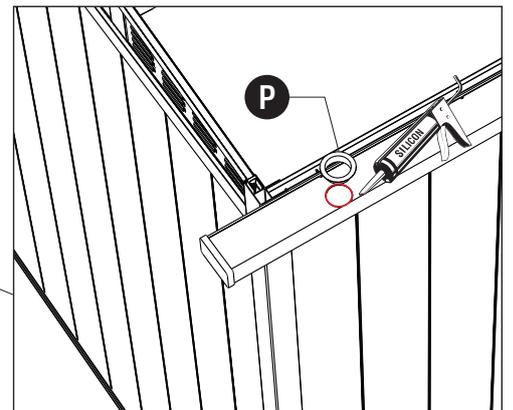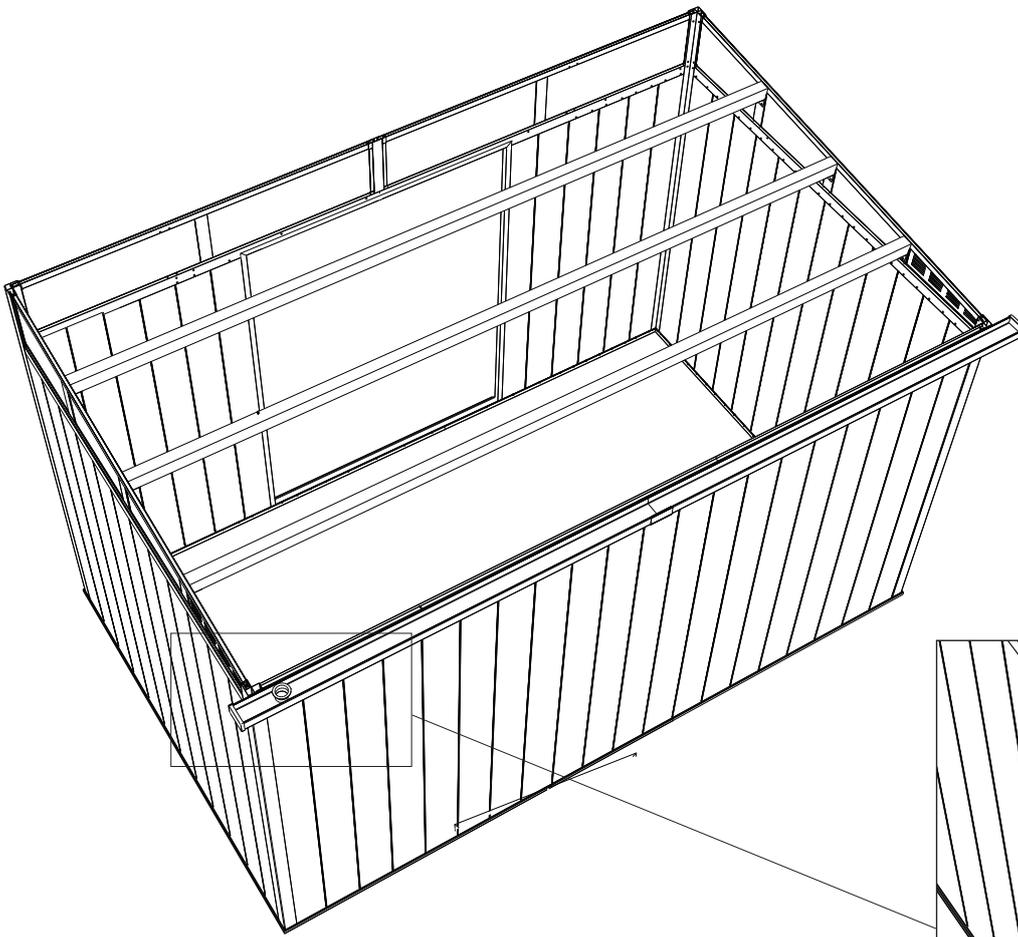

Install the gutter outlet, then fix it with sealant.

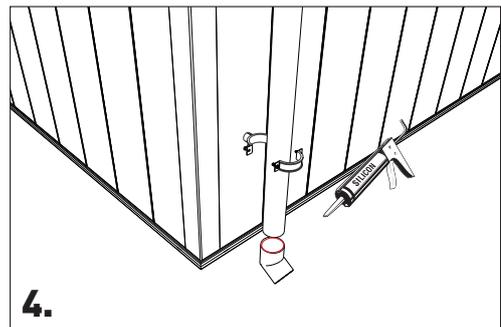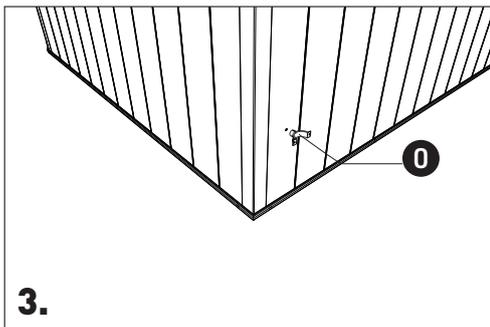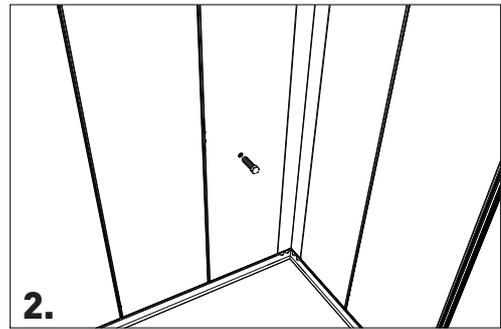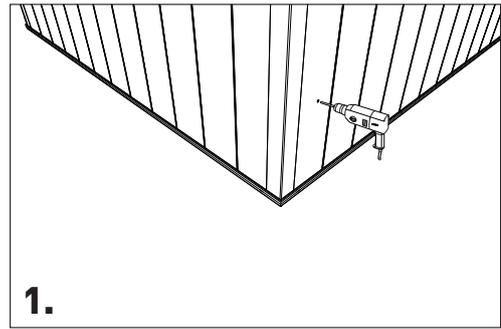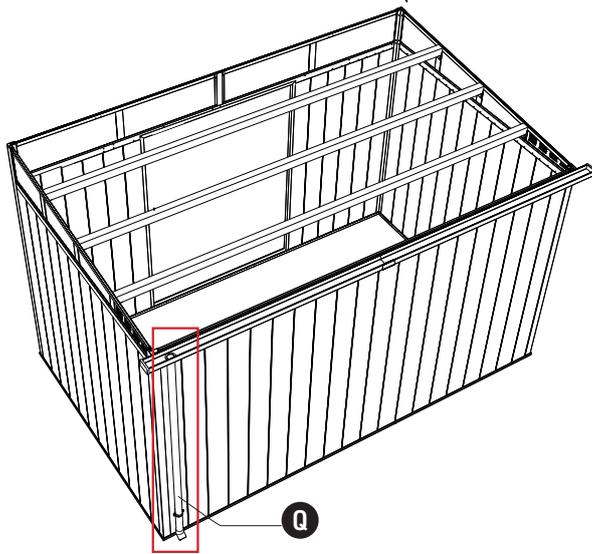



1. Drill a hole on the position where is 30cm distance from the ground, please remember the position should be on the vertical line of the downpipe.
2. Fix the screw on the WPC wall panel from inner side of the shed.
3. Fasten one half of the gutter clamp; place the downpipe, then fix it with the gutter clamp.
4. Glue the elbow so that connect it with the main downpipe.

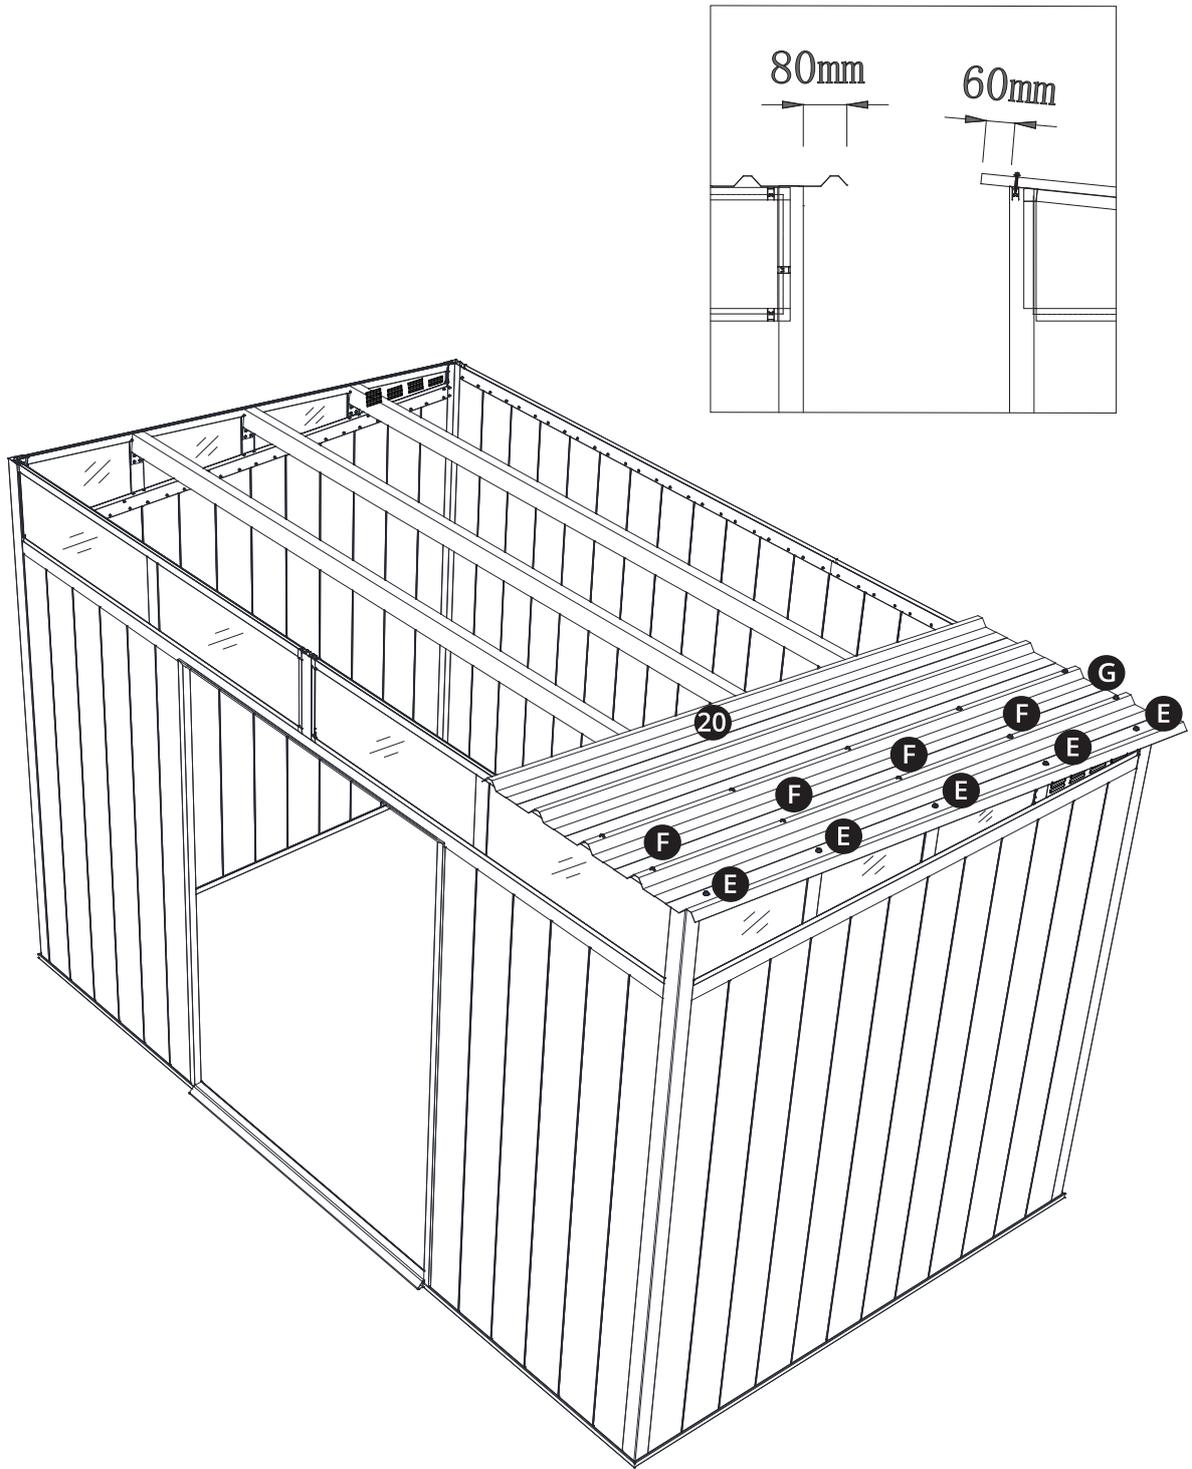


Install the color steel tile, the extension length of roof tile should be 60mm in the shed's front side, while the left and right side should be 80mm. Please note that the length of screws for roof tiles fixing is different from those for the connection with aluminum beams.



Install roof tiles one by one, please pay attention to the connection method shown as the bellow sketch map.

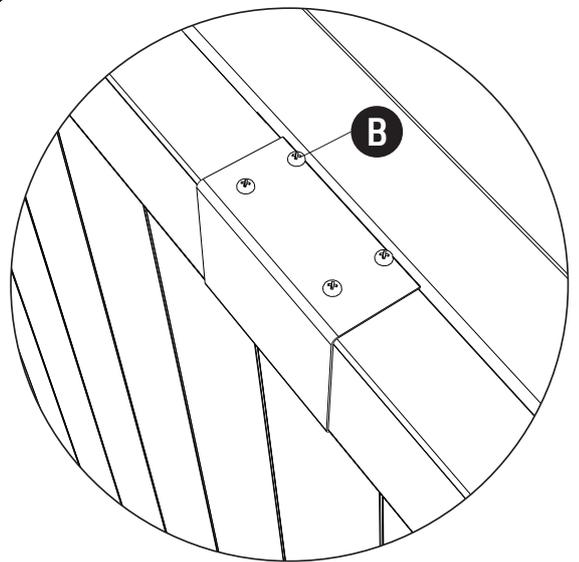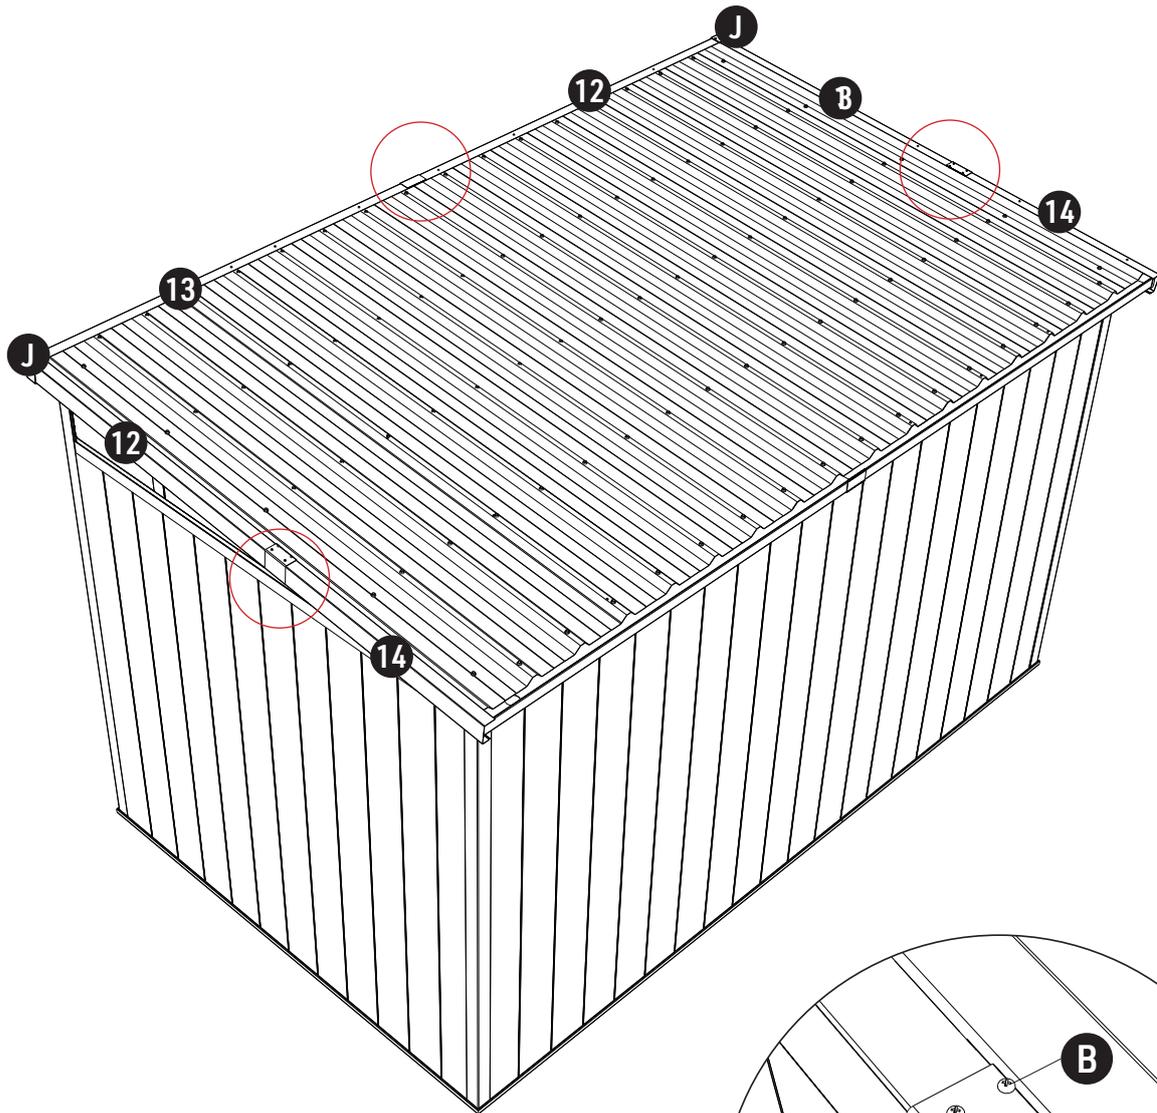


Install all aluminum verge boards in line with the diagram as bellow.

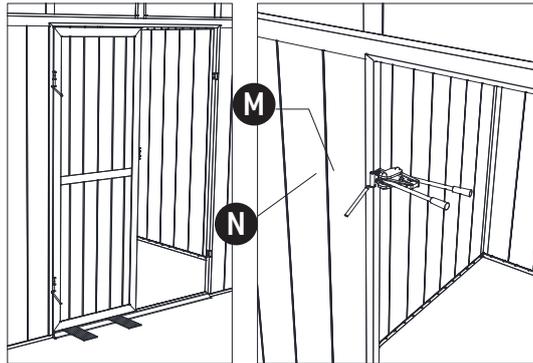


Please install the door with following steps:

1. 1. Assemble the hinge on the door frame with rivets according to the already installed hinges on the door(see diagram above);
2. Place the door in the position where needs to install it;
3. Put a subplate with a thickness of 5mm under the door;
4. Insert the other side of hinge into the place, and mark the position with a pencil;
5. Remove the door, then fix hinges with rivets.

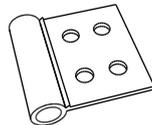


This type of hinge fits both left and right sides, you can remove the axis pin to adjust the left or right in accordance with actual requirement, please press the cap tightly on both ends after the installation. Before do above, please firstly take down the already installed hinges on the door.

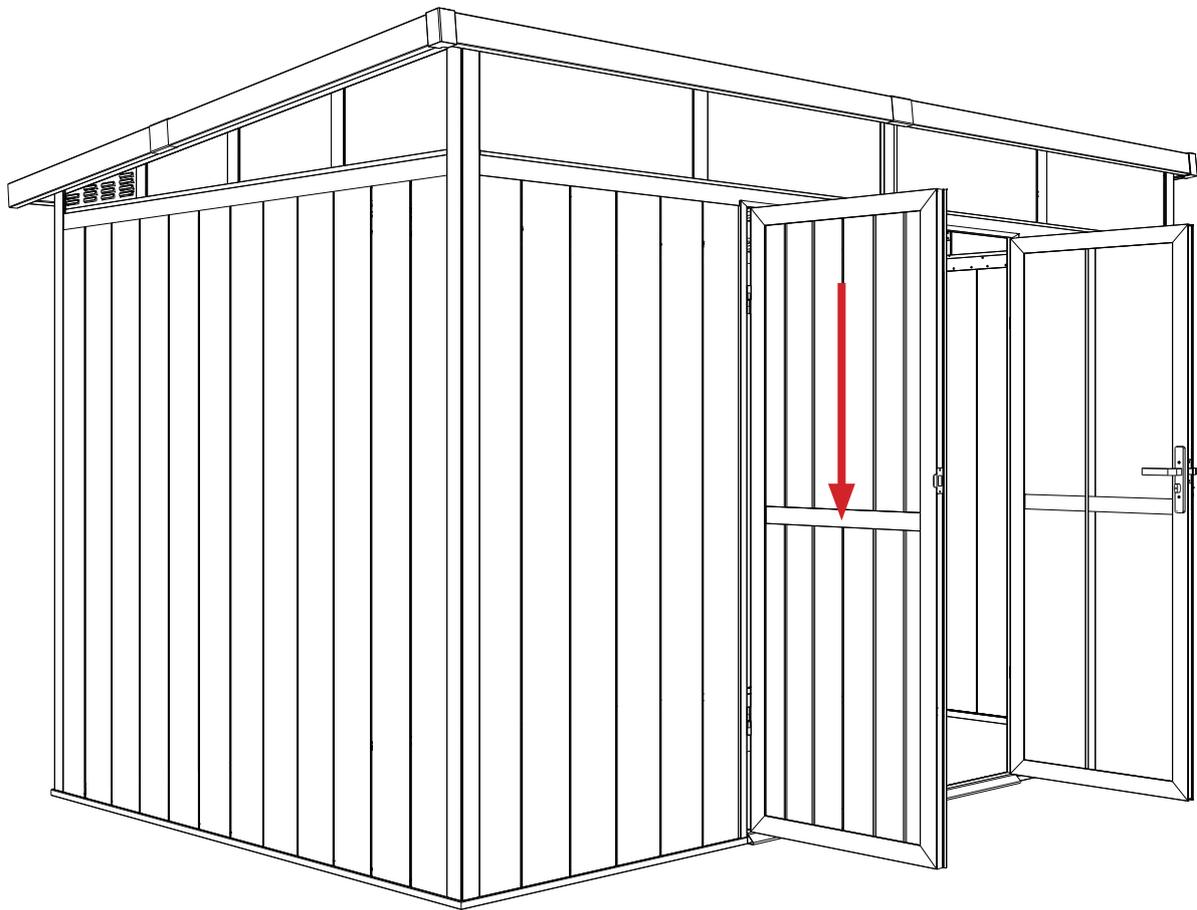

After fix the hinge, hang the door in the knuckles from the top downwards.




Install the latch of door.

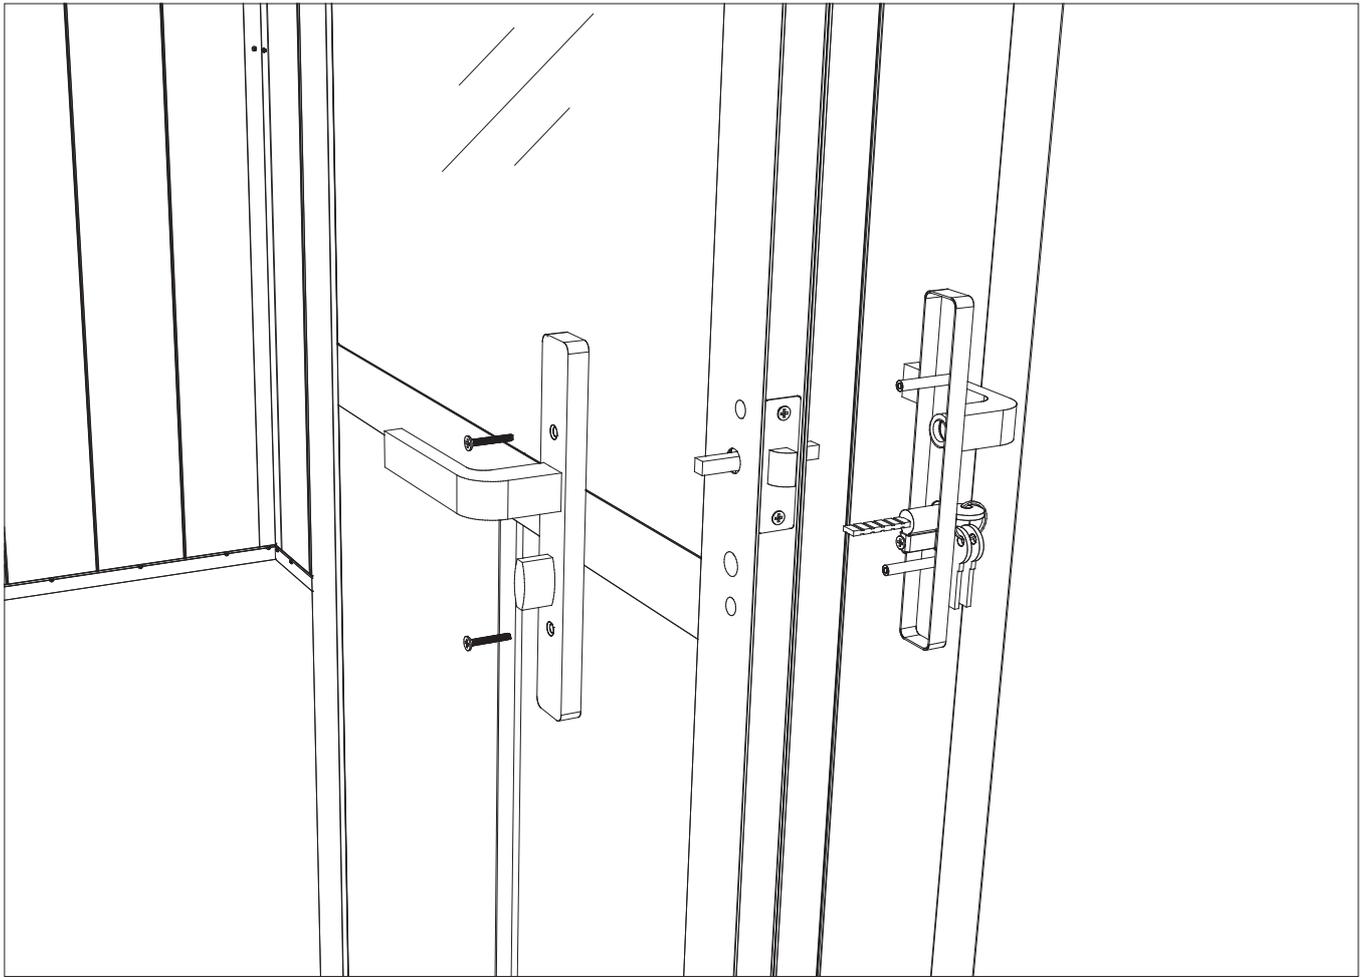

1. For better delivery, we've fixed the screws when packing, so the door handle cannot be used as default when you unpack it firstly.
2. Please unscrew the screw (see picture above) firstly, then rotate the handle by 90° (clockwise or anti-clockwise as your requirement), and tighten the screw.



The double door also can be installed on the side of wall, just remember that 8pcs of WPC wall panel can replace one set of double door.

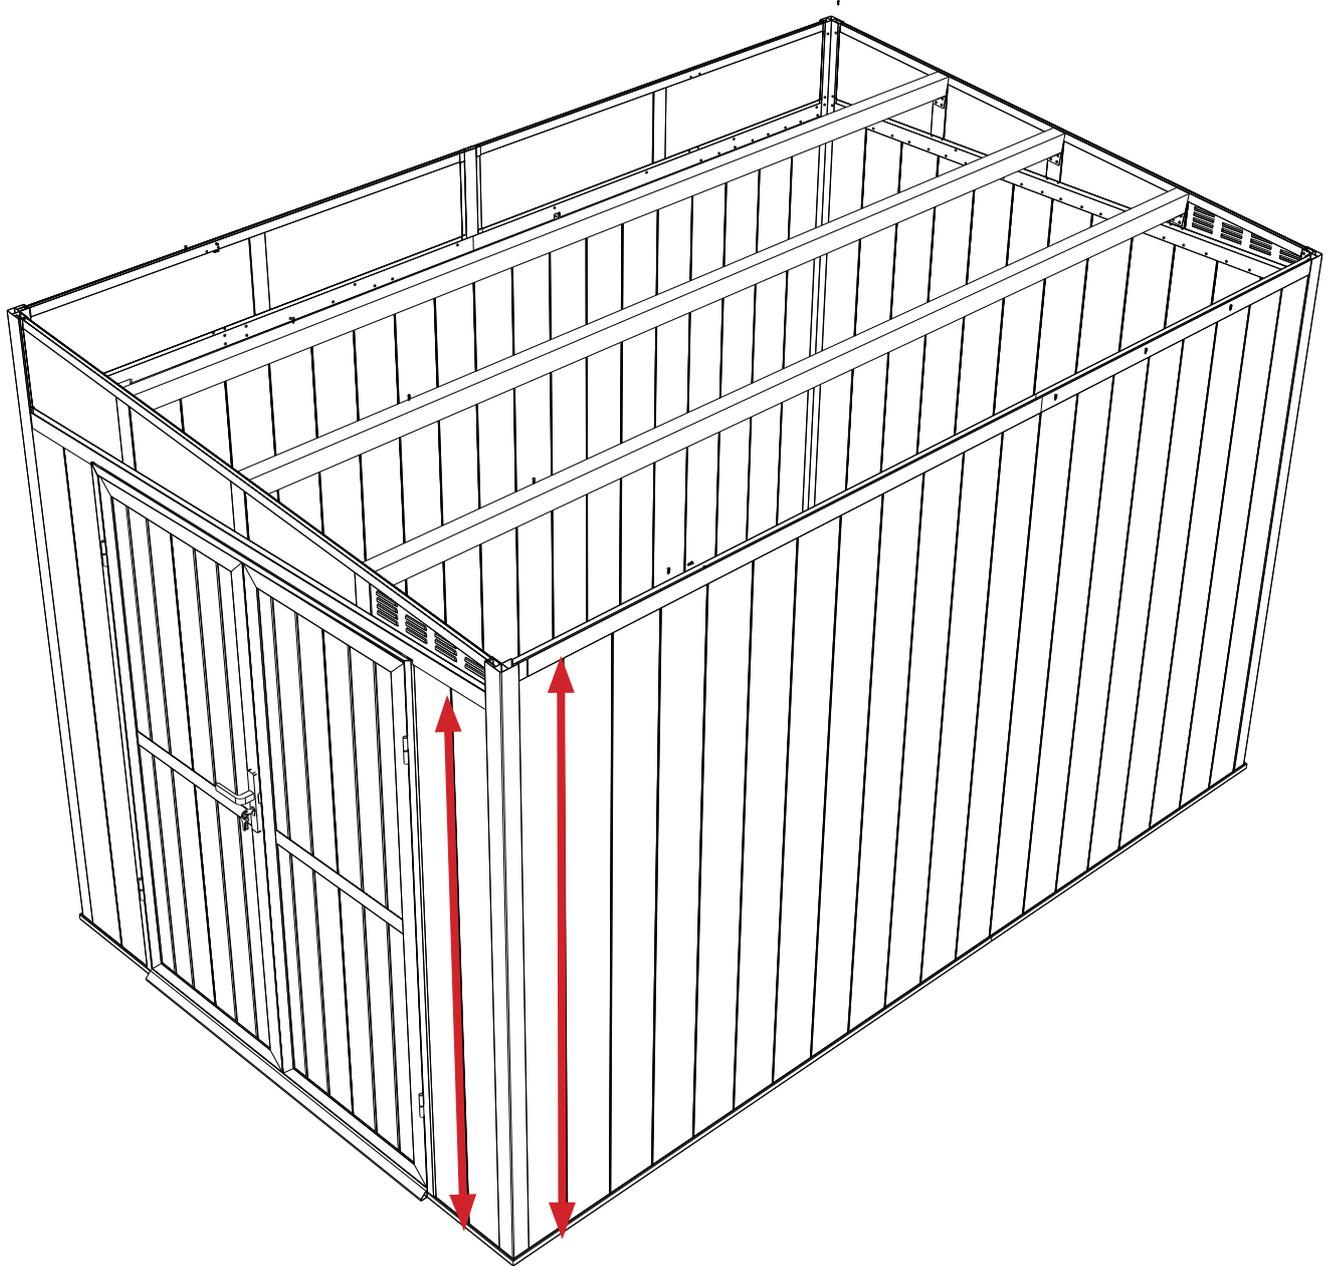

Please kindly know that the wall height of back side and side face are not the same, in this case, we do not suggest to install the double door on the back side.

Westwood 